

# Customer Instructions

## Air Operated Post Driver



**Warning:** ALWAYS PUT SAFETY FIRST. Do not operate the post driver if any unsafe conditions are present. Always open the air throttle **SLOWLY!**

**CALL 811 BEFORE YOU DIG**

### Operating Instructions

1. **Underground Utilities** - Be absolutely sure you know where all under ground utilities are so that you can avoid hitting them while driving a post into the ground. Utilities include but are not limited to electricity, gas, telephone, water, sewer, cable TV, lawn sprinklers etc.
2. **Air Pressure** - You must use a Filter-Regulator-Lubricator combination with the air operated post driver. The use of a pressure regulator is required for safety. Set the pressure regulator at 90 PSI. Higher air pressure could cause the post driver to lift off & fall from the post causing serious injury.
3. **Slowly** squeeze the air throttle valve lever to start the driver. Opening the throttle valve slowly will prevent a violent start of the driver.
4. Do not use a chuck or chuck adapter that is too large for the post being driven. The post should be loose in the chuck or chuck adapter with a minimum of 1/8" clearance & not over 5/8" clearance. **Adapters for both round and channel posts are included with the machine**
5. **Safety Equipment** - Do not operate the post driver unless the operator & any others near the post driver are wearing hard hats, safety glasses & ear protection.



**REMEMBER!!**  
**Call 811 before you dig**

Disclaimer:

*These instructions are intended as a helpful reminder. They do not replace the full operating instructions found in the owners manual, which is available at the rental counter.*

**A to Z Equipment Rentals & Sales - 4 locations in the Phoenix Arizona Metro Area**  
**If you like this piece of equipment, inquire about purchasing it !**

If equipment does not work properly, notify office at once -

• Phoenix, 602-955-5100 • North Valley, 602-992-1150 • East Valley, 480-539-8700 • West Valley, 623-925-0200 •