



Customer Instructions Skid Steer Loader

IF THE SKID STEER TIPS OR ROLLS OVER AT ANY POINT DURING OPERATION

STOP

TURN OFF THE ENGINE ASAP AND CONTACT A to Z IMMEDIATELY

DO NOT ATTEMPT TO UPRIGHT THE MACHINE UNLESS INSTRUCTED TO BY A to Z EQUIPMENT

or catastrophic engine damage can occur

(Following our instructions after a tip or roll over may save you the price of an engine.)

Call 811 before you dig. It is your responsibility to know where all underground utilities are before you dig.

- **No riders are EVER ALLOWED on a skid loader.**
- **Customers are responsible for all damage done to the skid steer while it is in their possession.**

Operating Instructions

1. Always use hand rails and steps when mounting the machine. Never enter machine unless loader arms are lowered. Fasten seat belt and/or lower safety bar. Be sure controls are in the neutral or park position and parking brake is set before starting.
2. Start the engine from the operator's seat only. Turn the key counter clockwise to auxiliary and wait 20 seconds to heat the glow plugs. Then turn the key clockwise to start the unit. Once the unit is started allow the unit 30 seconds to warm up. Check all indicator lights before starting your job. If there are any problems shown by the indicator lights, do not use the machine; turn it off and call A to Z Equipment.
3. To move forward, push both levers away from you. To back up, pull the levers toward you. To turn left pull the left lever back, while simultaneously pushing the right lever forward. Perform the reverse to make a right turn. To stop let go of the levers.
4. The 2 pedals at your feet operate the bucket. The left pedal controls the up and down motion of the bucket, and the right pedal is used to scoop and dump. Pushing the front of the pedal picks up the material, pushing the back of the pedal dumps the material. Make sure the bucket is raised slightly to avoid skidding on the ground.
5. When operating the machine always keep the bucket low for visibility and so that the center of gravity is low. Operating the machine with the bucket in the air will cause the machine to be unstable and increase the chances of rolling it over, and causing damage to the machine, and injury to the operator.
6. Driving the machine at a high speed or performing sudden maneuvers can also be unsafe and can increase the chance of damage, rollover, and injury to the operator.
7. Driving the machine over uneven ground or on a steep grade can also be unsafe and increase the chance of damage, rollover and/or injury to the operator.
8. If the Skid Steer tips or rolls over during operation it is important to shut the engine down immediately to avoid damaging the machine or causing injury to the operator. Failure to shut down the machine can cause engine damage and unsafe conditions for the operator. If a rollover or accident occurs shut it down and call A to Z immediately!

Disclaimer: *These instructions are intended as a helpful reminder. They do not replace the full operating instructions found in the owners manual, which is available at the rental counter.*

**A to Z Equipment Rentals & Sales - 4 locations in the Phoenix Arizona Metro Area
If you like this piece of equipment, inquire about purchasing it !**

If equipment does not work properly, notify office at once -

• Phoenix, 602-955-5100 • North Valley, 602-992-1150 • East Valley, 480-539-8700 • West Valley, 623-925-0200