

## Customer Instructions Stump Grinder-Dosko 620



**Warning:** Stump grinders can be dangerous. Use safety glasses, gloves, sturdy footwear, etc. You may wish to use a dust mask and face shield. Never allow anyone in the area while grinding. Never leave grinder unattended. Always position machine to protect windows and vehicles from flying debris. Operate grinder only from correct position. Keep all bystanders and animals away from flying dust and debris.

### Operating Instructions

1. Do not use or start stump grinder with tow hitch attached. Remove the tow hitch before use. Before starting, press down on handle so that cutter wheel is off the ground.
2. To start the engine, pull out on/off switch. Pull choke if engine is cold, and set throttle about 1/4 open. Engage operator presence switch by pulling up on handle bar bow. Turn key to start engine. When engine starts, close choke. Pull throttle to full open.
3. Position stump grinder wheel at front edge of stump.
4. Pull down on brake lever to lock brake. Make sure parking brake or wheel brake is engaged before using machine.
5. Lower the cutter wheel slowly using a left-to-right motion to grind the stump. Grind stump to desired depth.
6. TOWING INSTRUCTIONS: NEVER tow over 45 mph. Be sure that safety chain is properly hooked to vehicle and stump grinder. Always be cautious when backing up. It is the responsibility of the driver/renter to obey all traffic laws with regard to towing equipment.



#### Disclaimer:

*These instructions are intended as a helpful reminder. They do not replace the full operating instructions found in the owners manual, which is available at the rental counter.*

**A to Z Equipment Rentals & Sales - 4 locations in the Phoenix Arizona Metro Area  
If you like this piece of equipment, inquire about purchasing it !**

If equipment does not work properly, notify office at once -

• Phoenix, 602-955-5100 • North Valley, 602-992-1150 • East Valley, 480-539-8700 • West Valley, 623-925-0200 •