

Customer Instructions Dethatcher/Verticutter



Warning: Be sure to wear sturdy footwear, and eye protection when using this machine. Machine creates a large amount of dust, so you may wish to wear a dust mask (available for purchase at the rental counter). Marker flags are also available for sale at the rental counter so you can be sure to avoid running over & damaging sprinkler heads.

Operating Instructions

1. Mow your lawn at the lowest height possible. Pick up any lawn debris like branches, rocks, etc.
2. To start the engine, turn the on/off switch to “on,” turn the fuel on, move the choke lever to “start.” Pull the recoil rope to start the engine, and when it starts move the choke lever to the “run” position. Make sure blades are in the raised position before engaging them to avoid damage to the blades.
3. Adjust & lower blade height control until blades engage and penetrate the ground, pulling machine along.
4. Move across your lawn, slightly overlapping with each pass. When the entire yard has been dethatched, turn the machine 90°, or perpendicular to the previous pattern and repeat. Continue until all thatch is removed from the surface of the soil--in other words, the soil is visible through remaining grass.
5. Use a rake, mower or lawn vac to pick up loose thatch.

Disclaimer: These instructions are intended as a helpful reminder. They do not replace the full operating instructions found in the owners manual, which is available at the rental counter.

A to Z Equipment Rentals & Sales - 4 locations in the Phoenix Arizona Metro Area
If you like this piece of equipment, inquire about purchasing it !

If equipment does not work properly, notify office at once - Phoenix, 602-955-5100 • North Valley., 602-992-1150 •
• East Valley, 480-539-8700 • West Valley, 623-925-0200 •